

FIG. 1

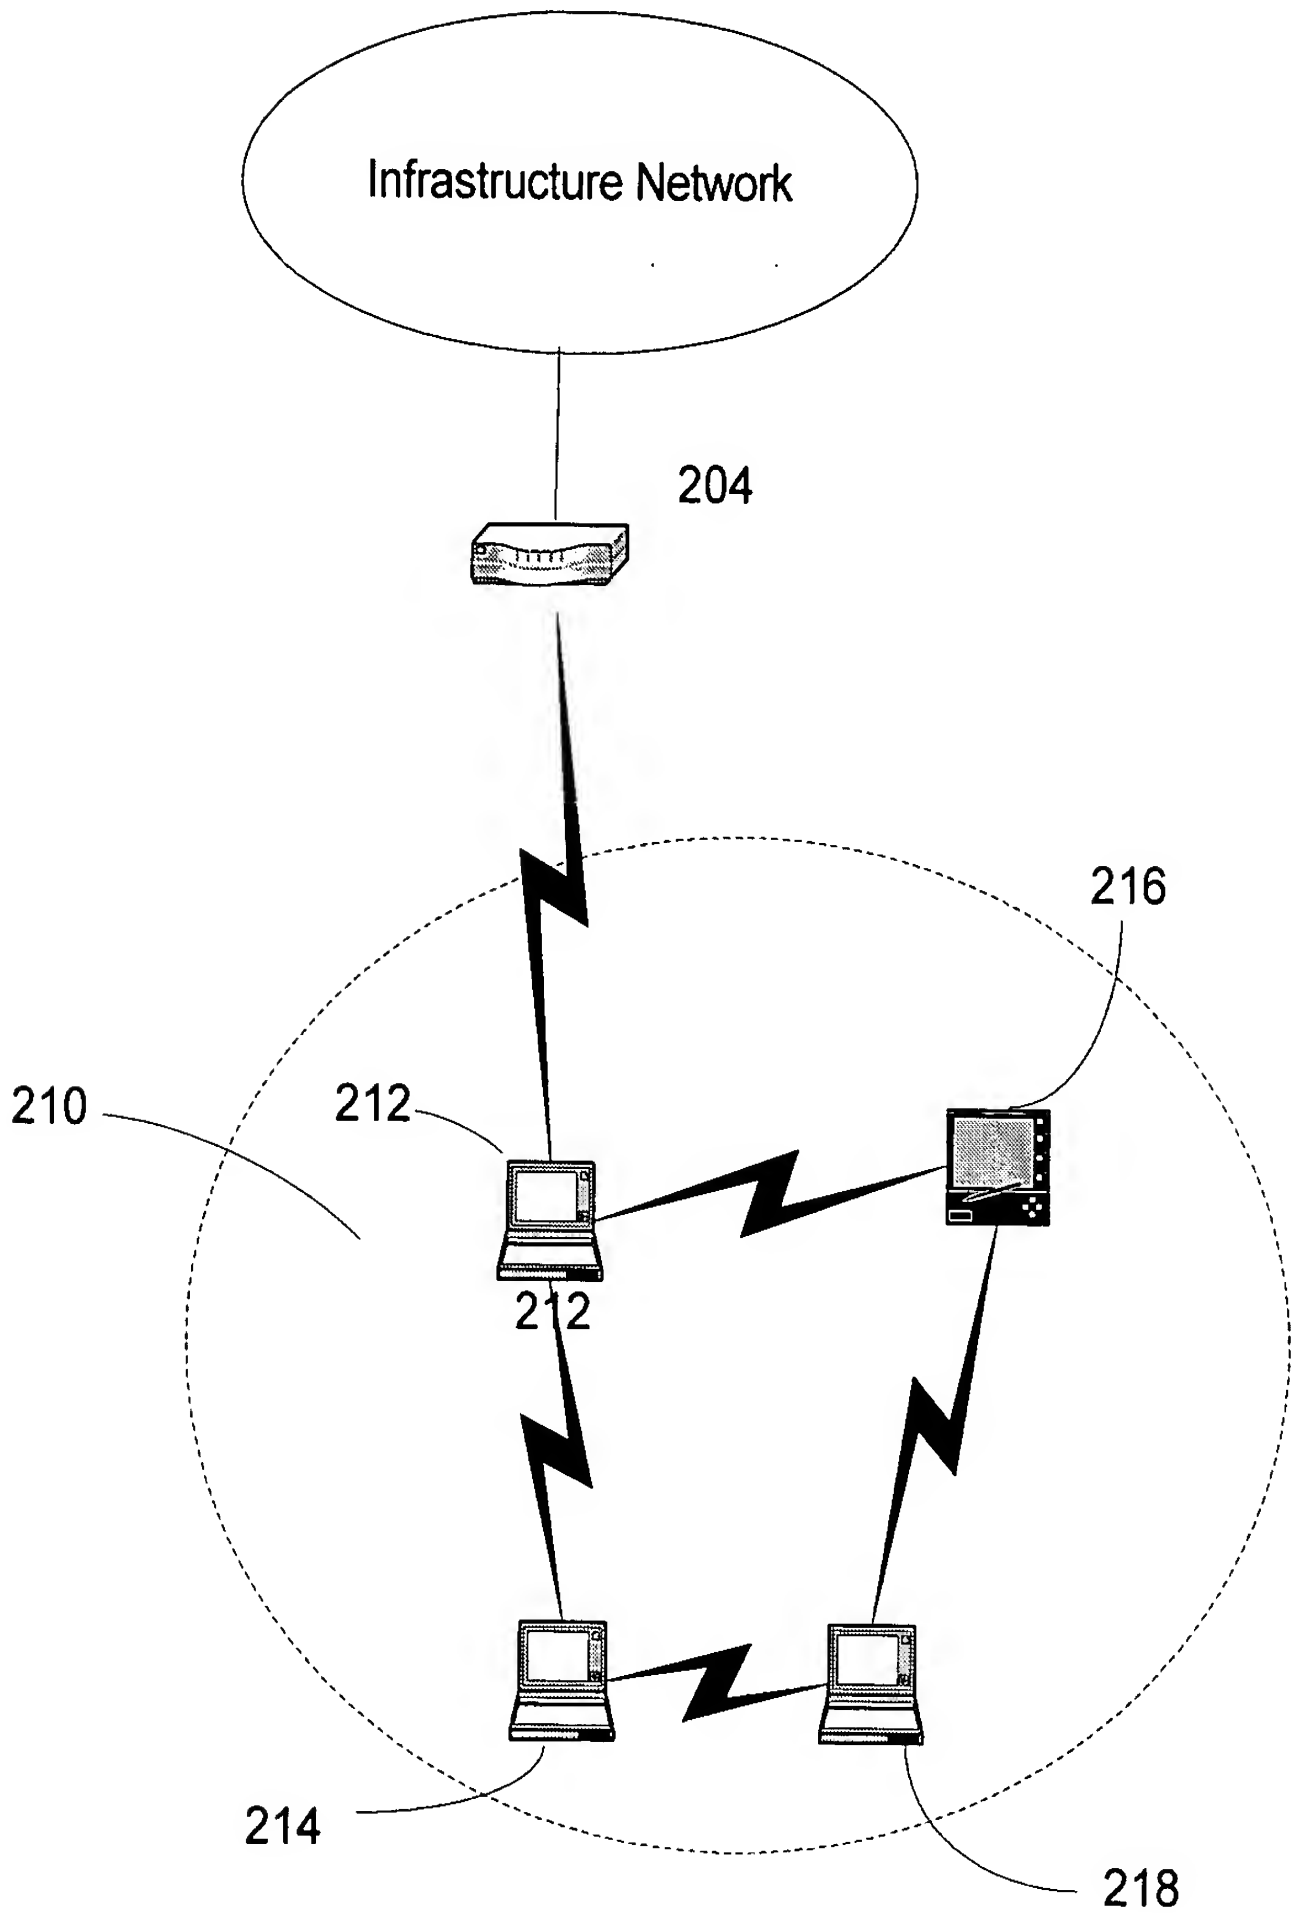


FIG. 2



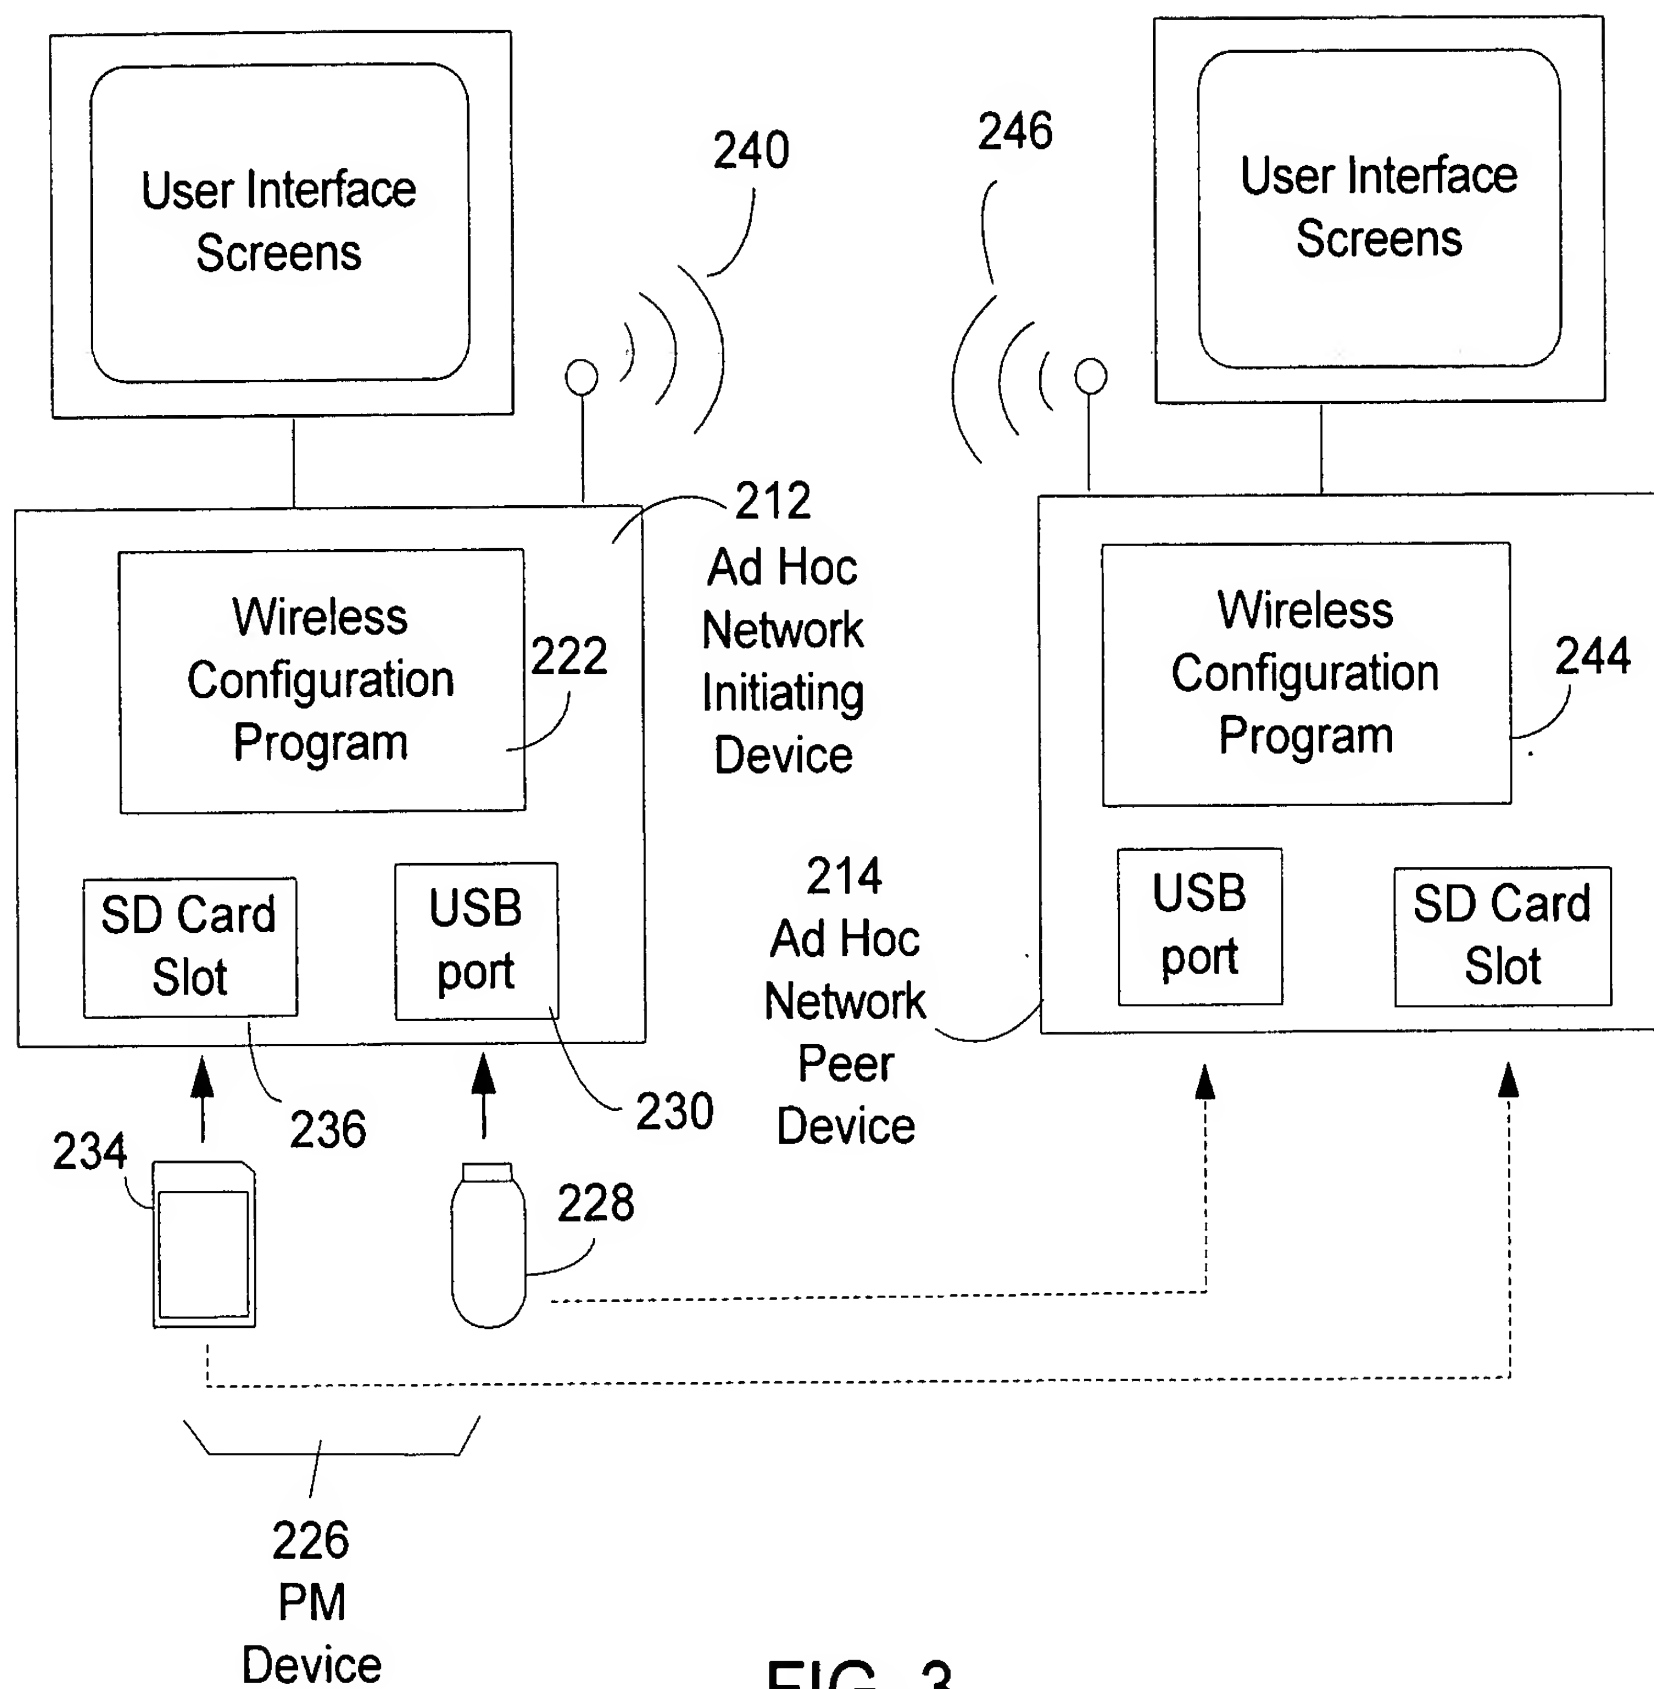


FIG. 3

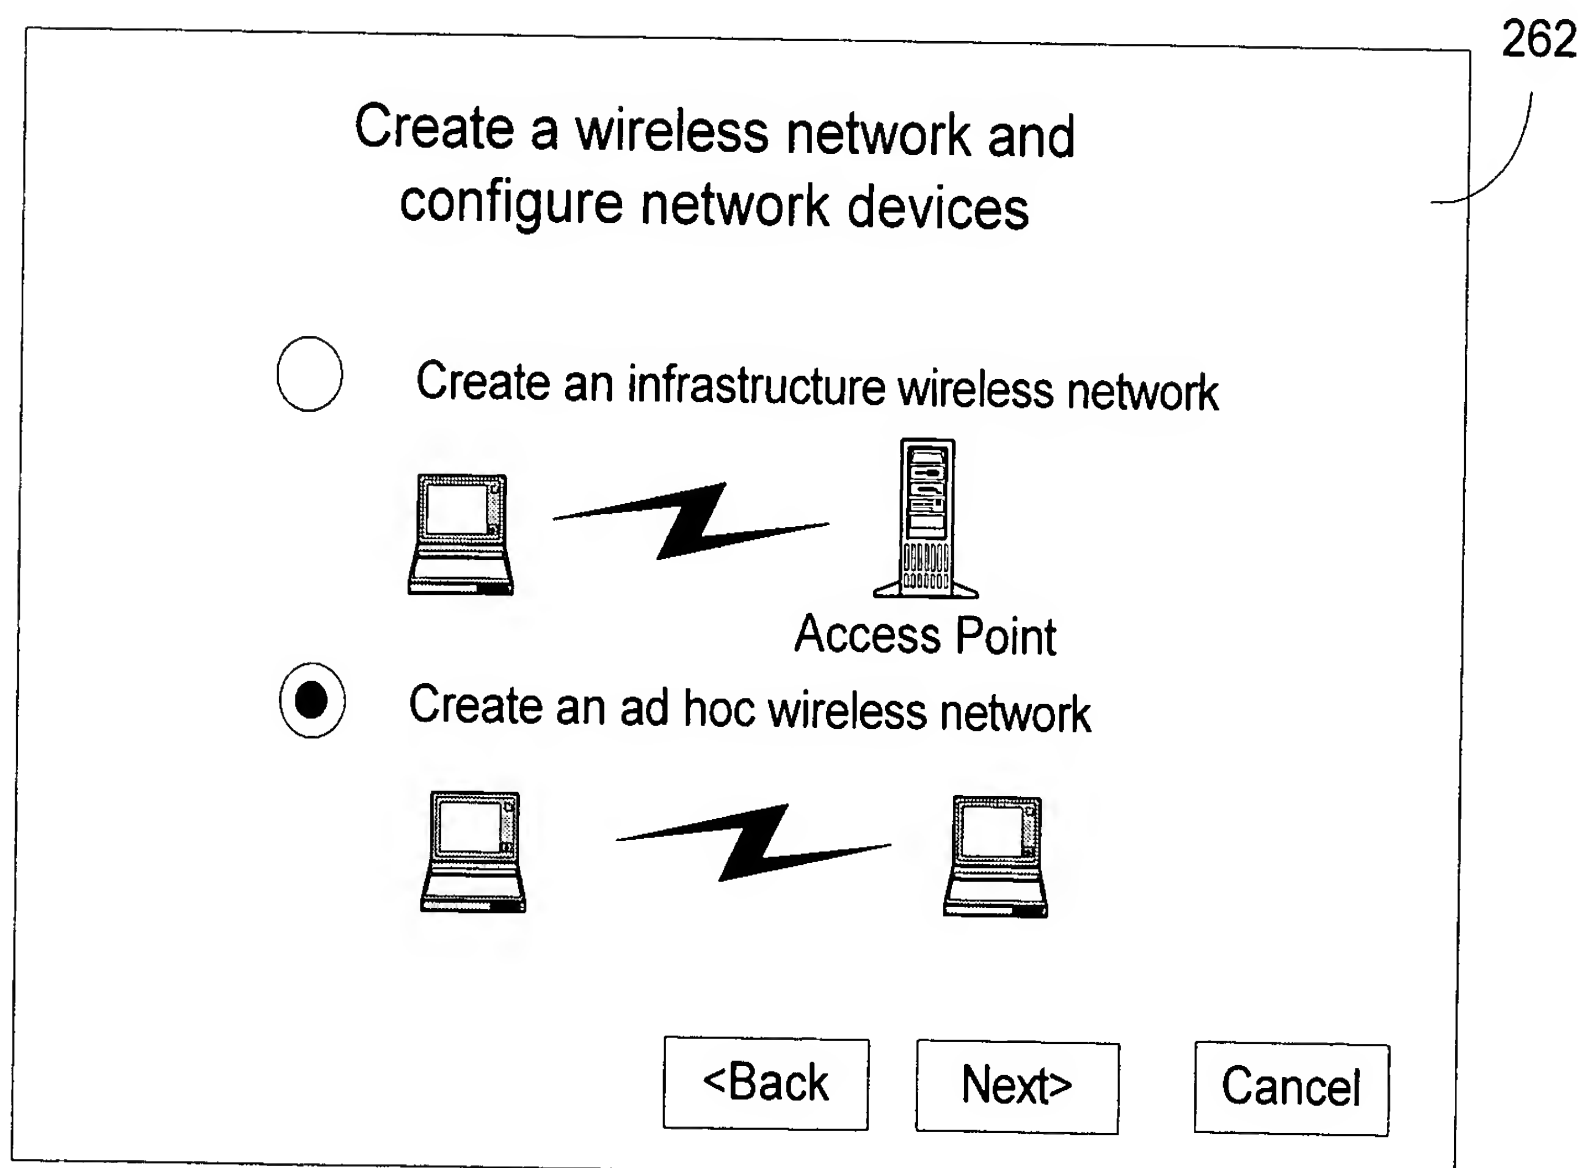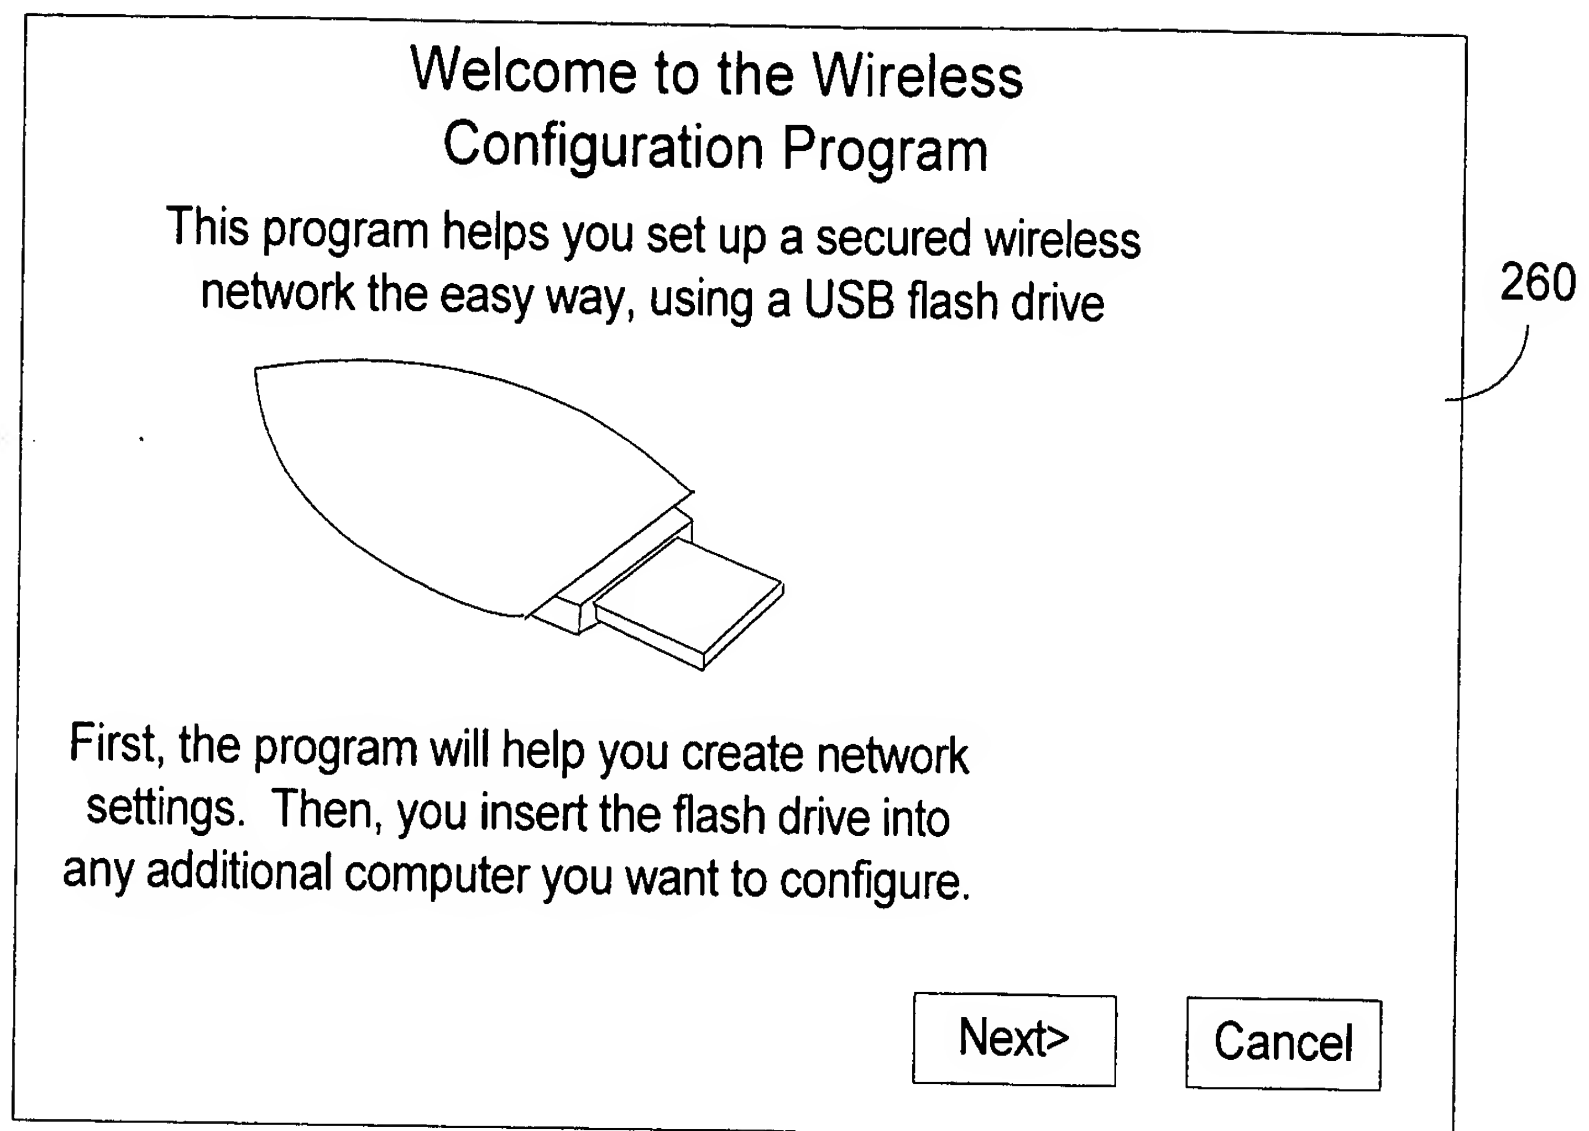

264

Create a name and key for your  
ad hoc wireless network

Enter the network name. You can make one up  
or use this one.

Network Name:  276

Type and confirm a WEP key for the network. You can make  
one up or use this one.

Network key:  278

Confirm Network Key:

280

FIG. 4C

266

Save your wireless configuration

Plug your flash drive into any USB port, select the driver  
letter, and click next. The wireless network settings will be  
saved to the flash drive.

Drive:

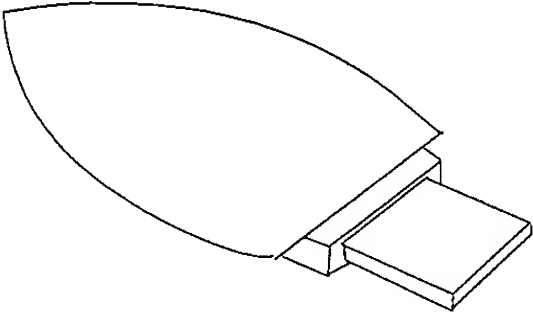


FIG. 4D

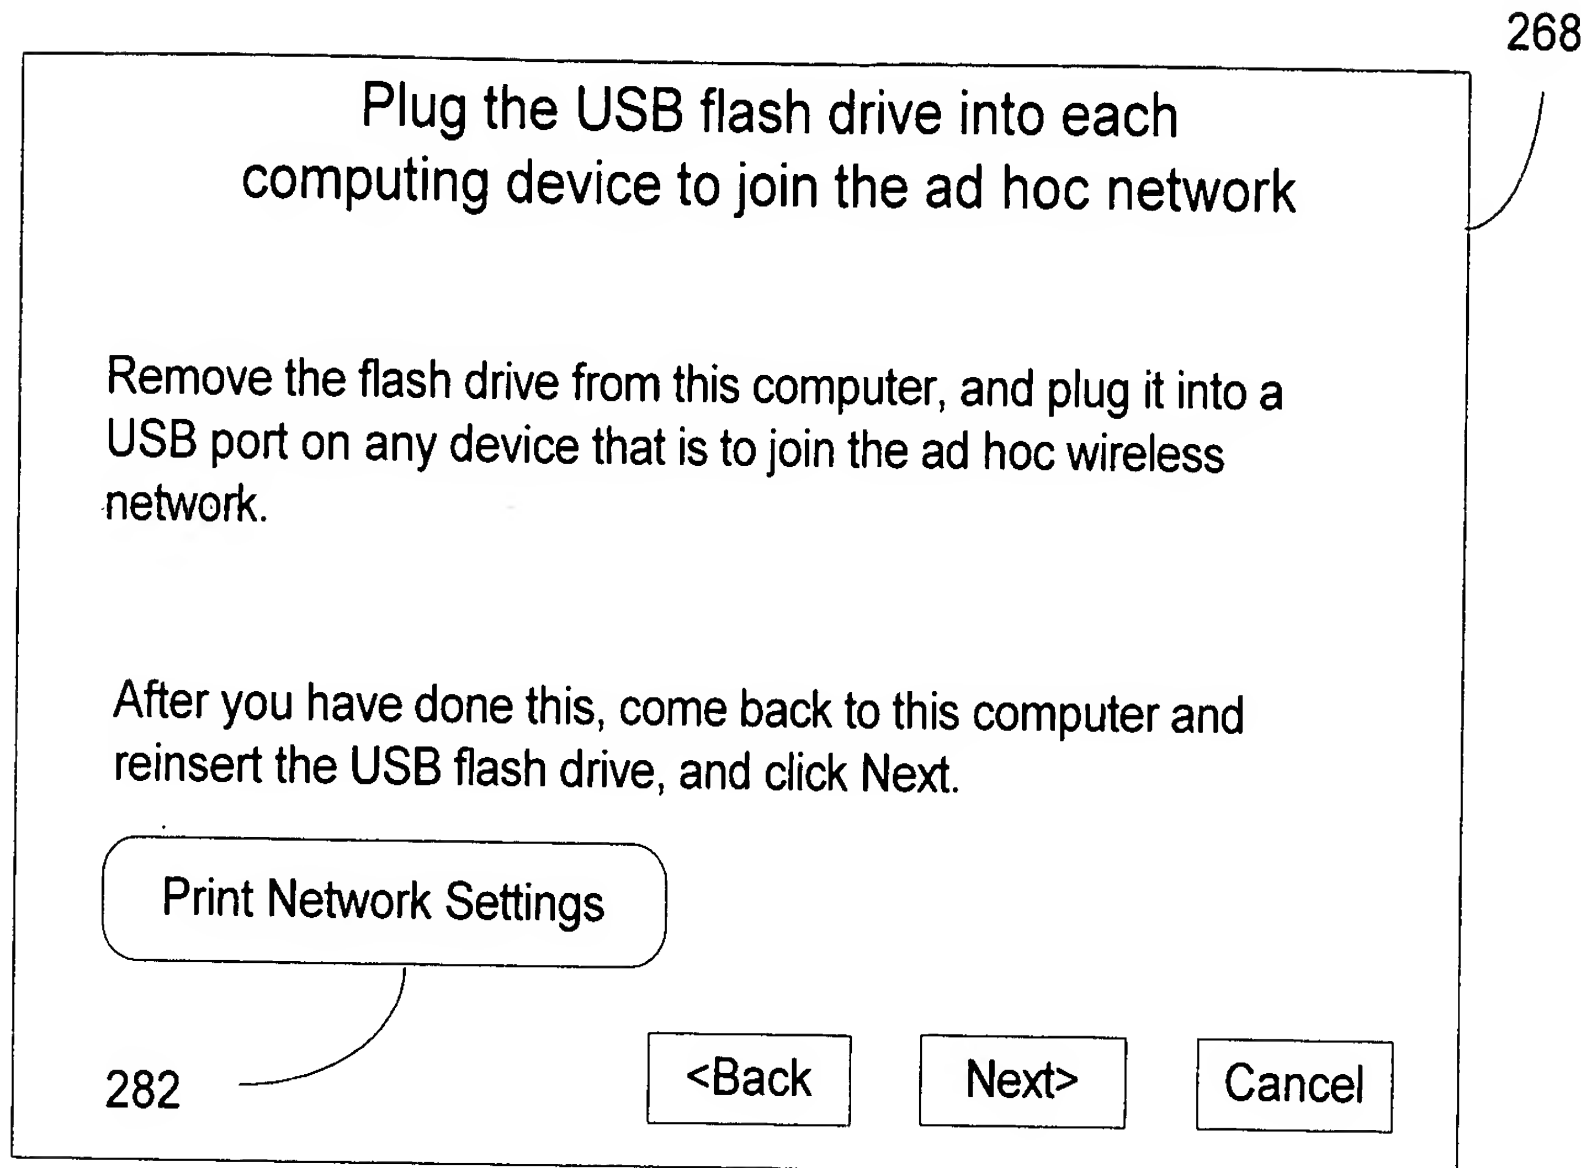


FIG. 4E

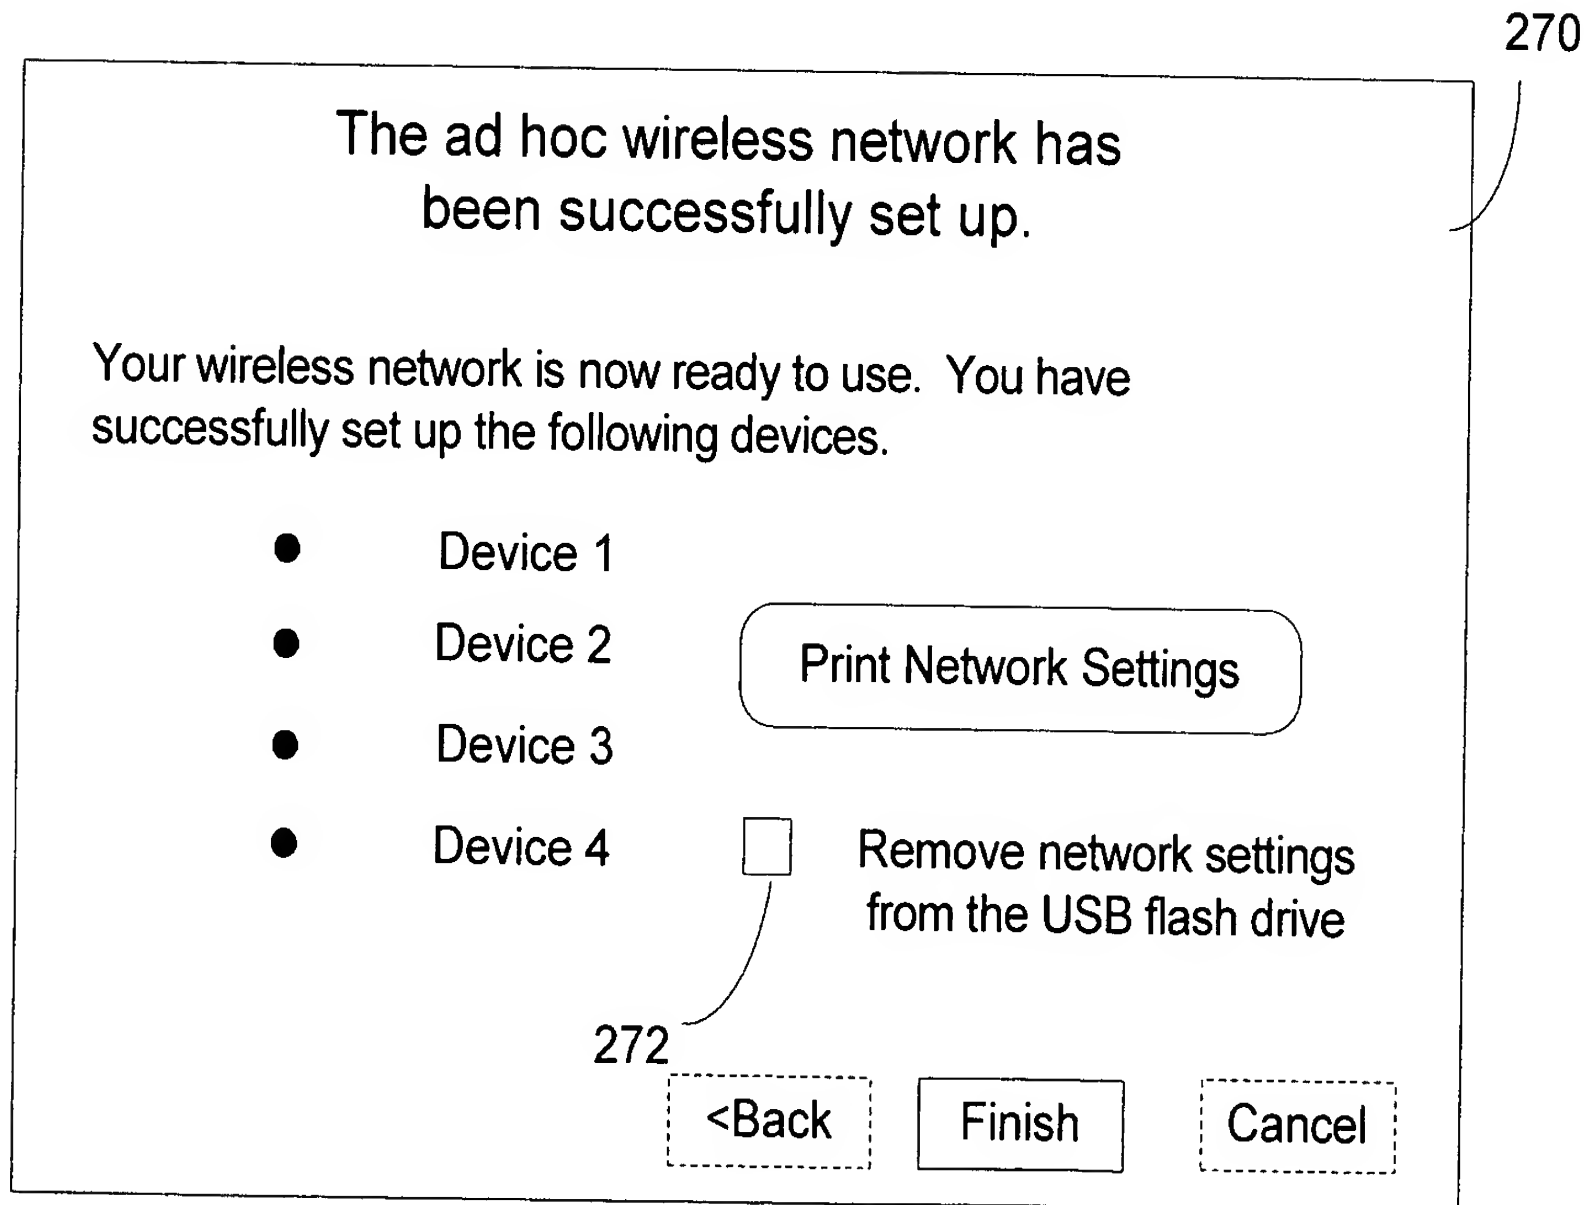


FIG. 4F

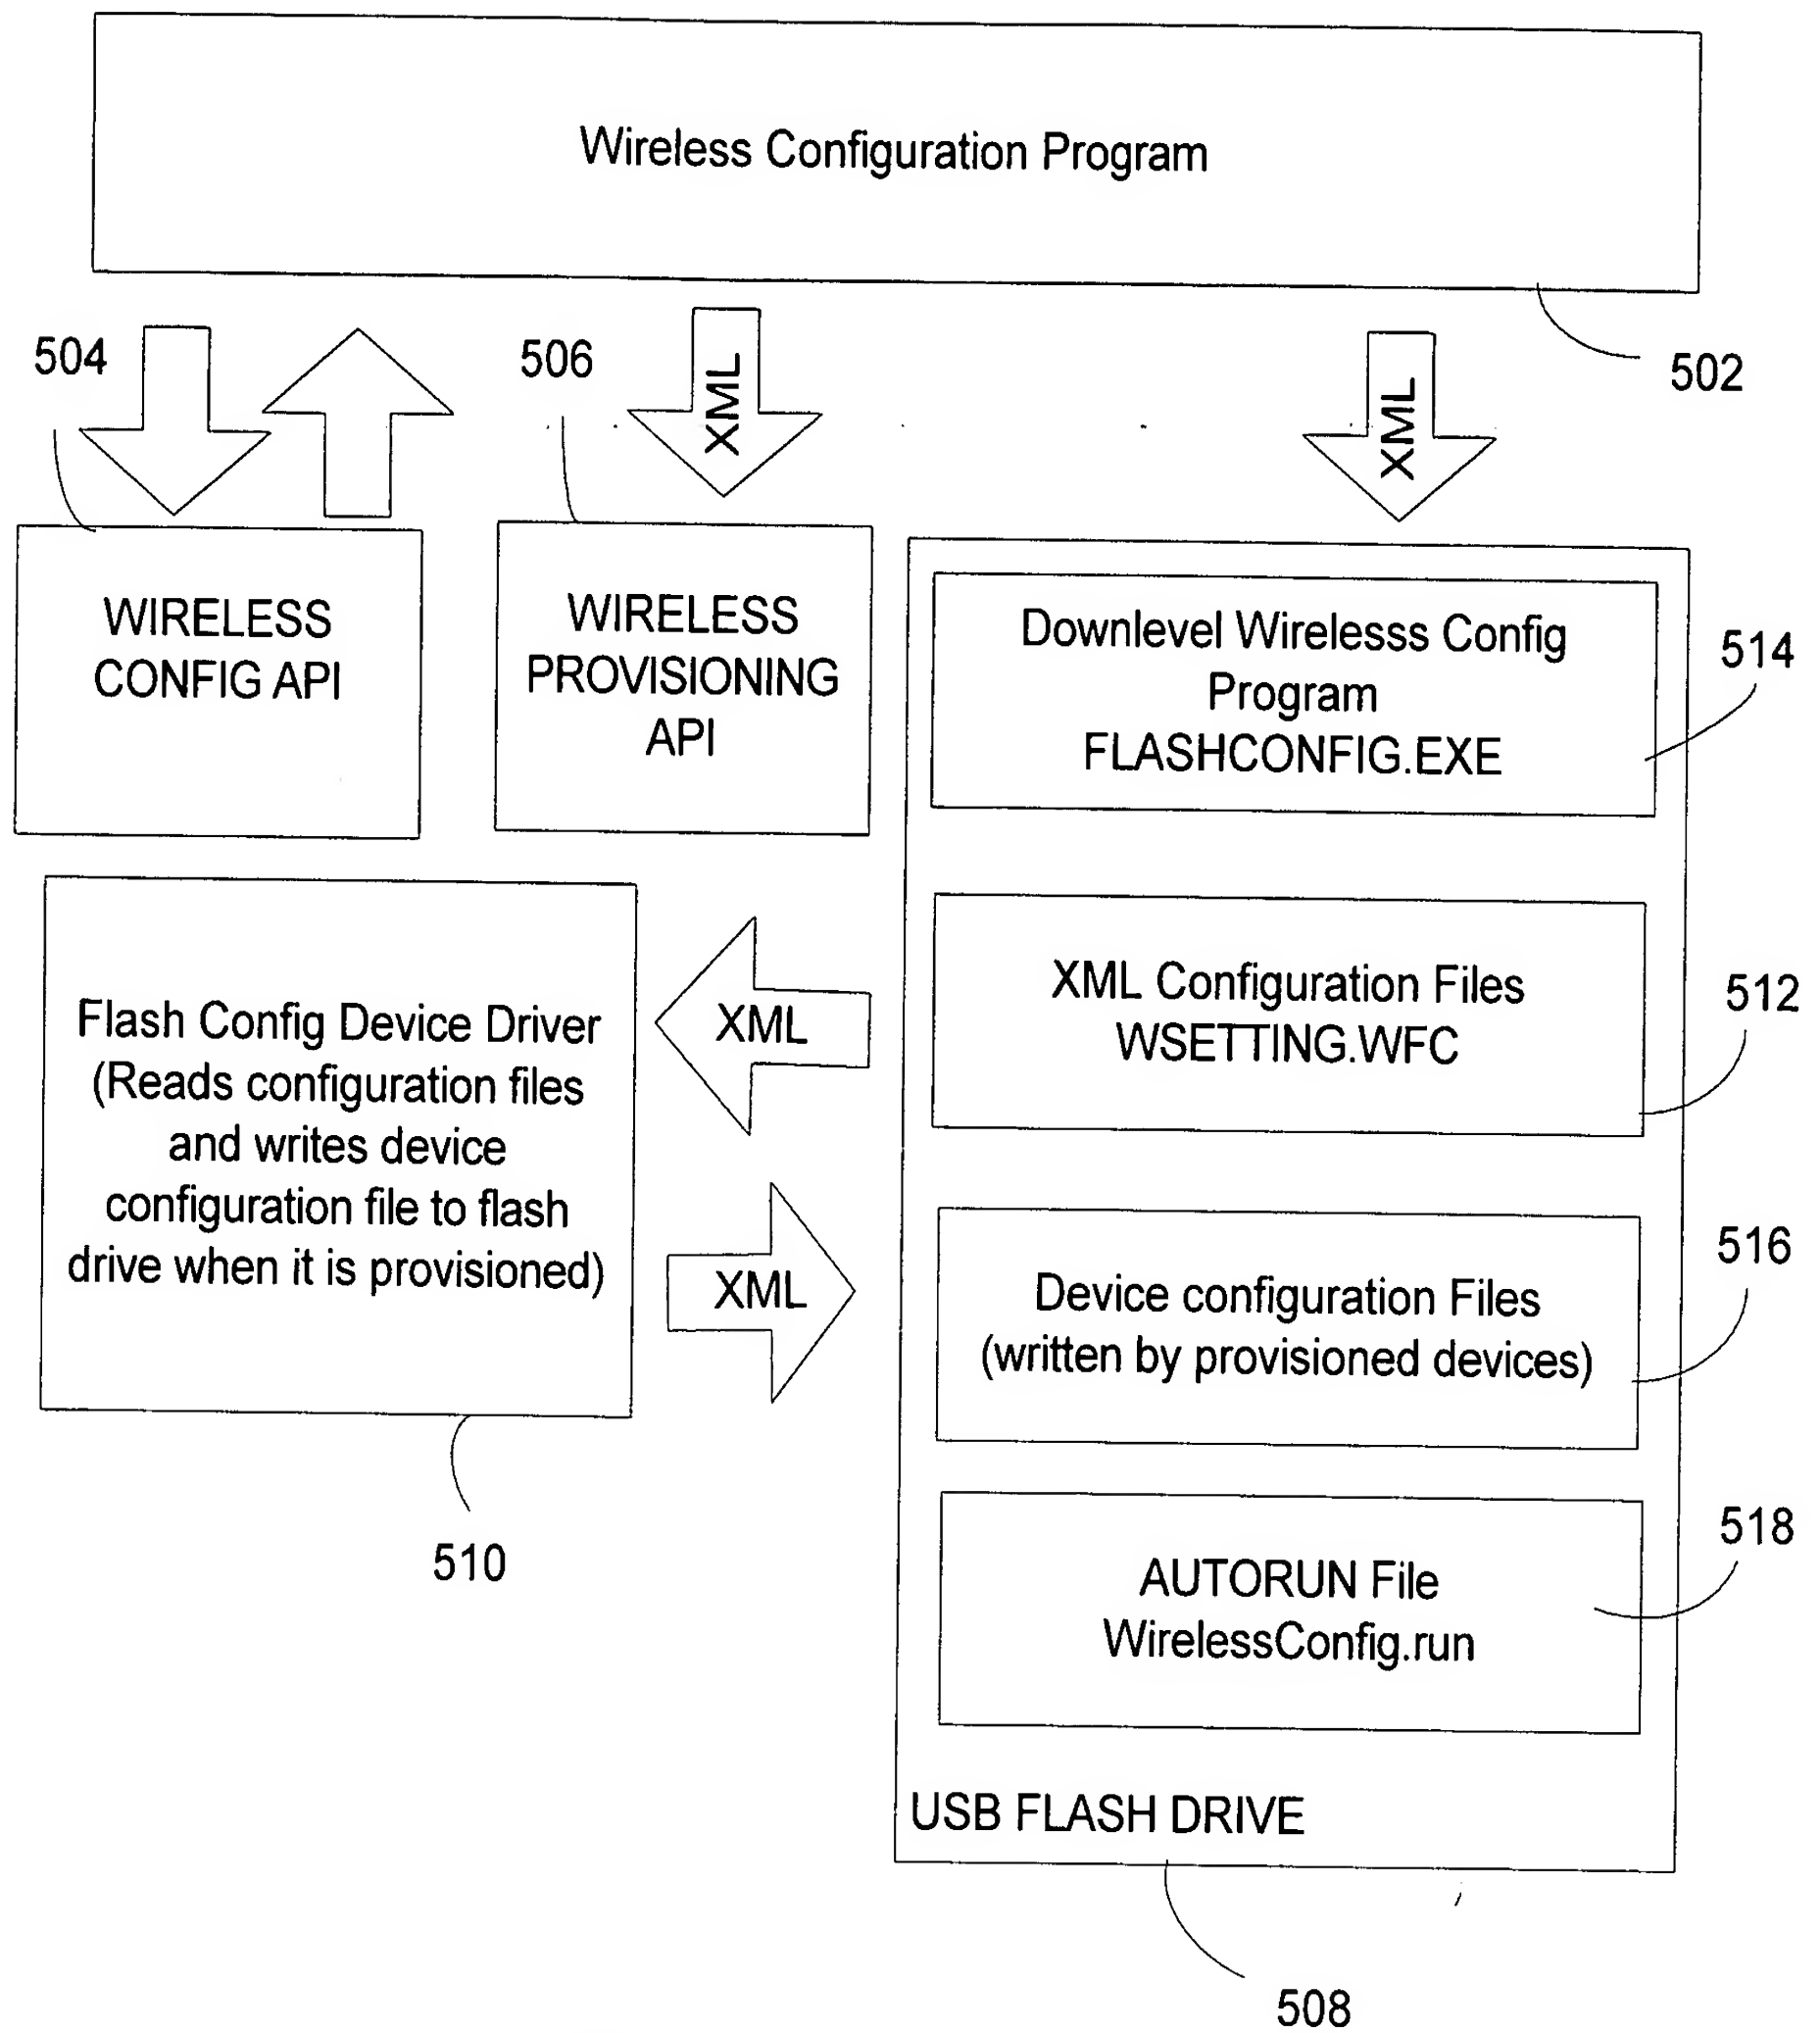


FIG. 5

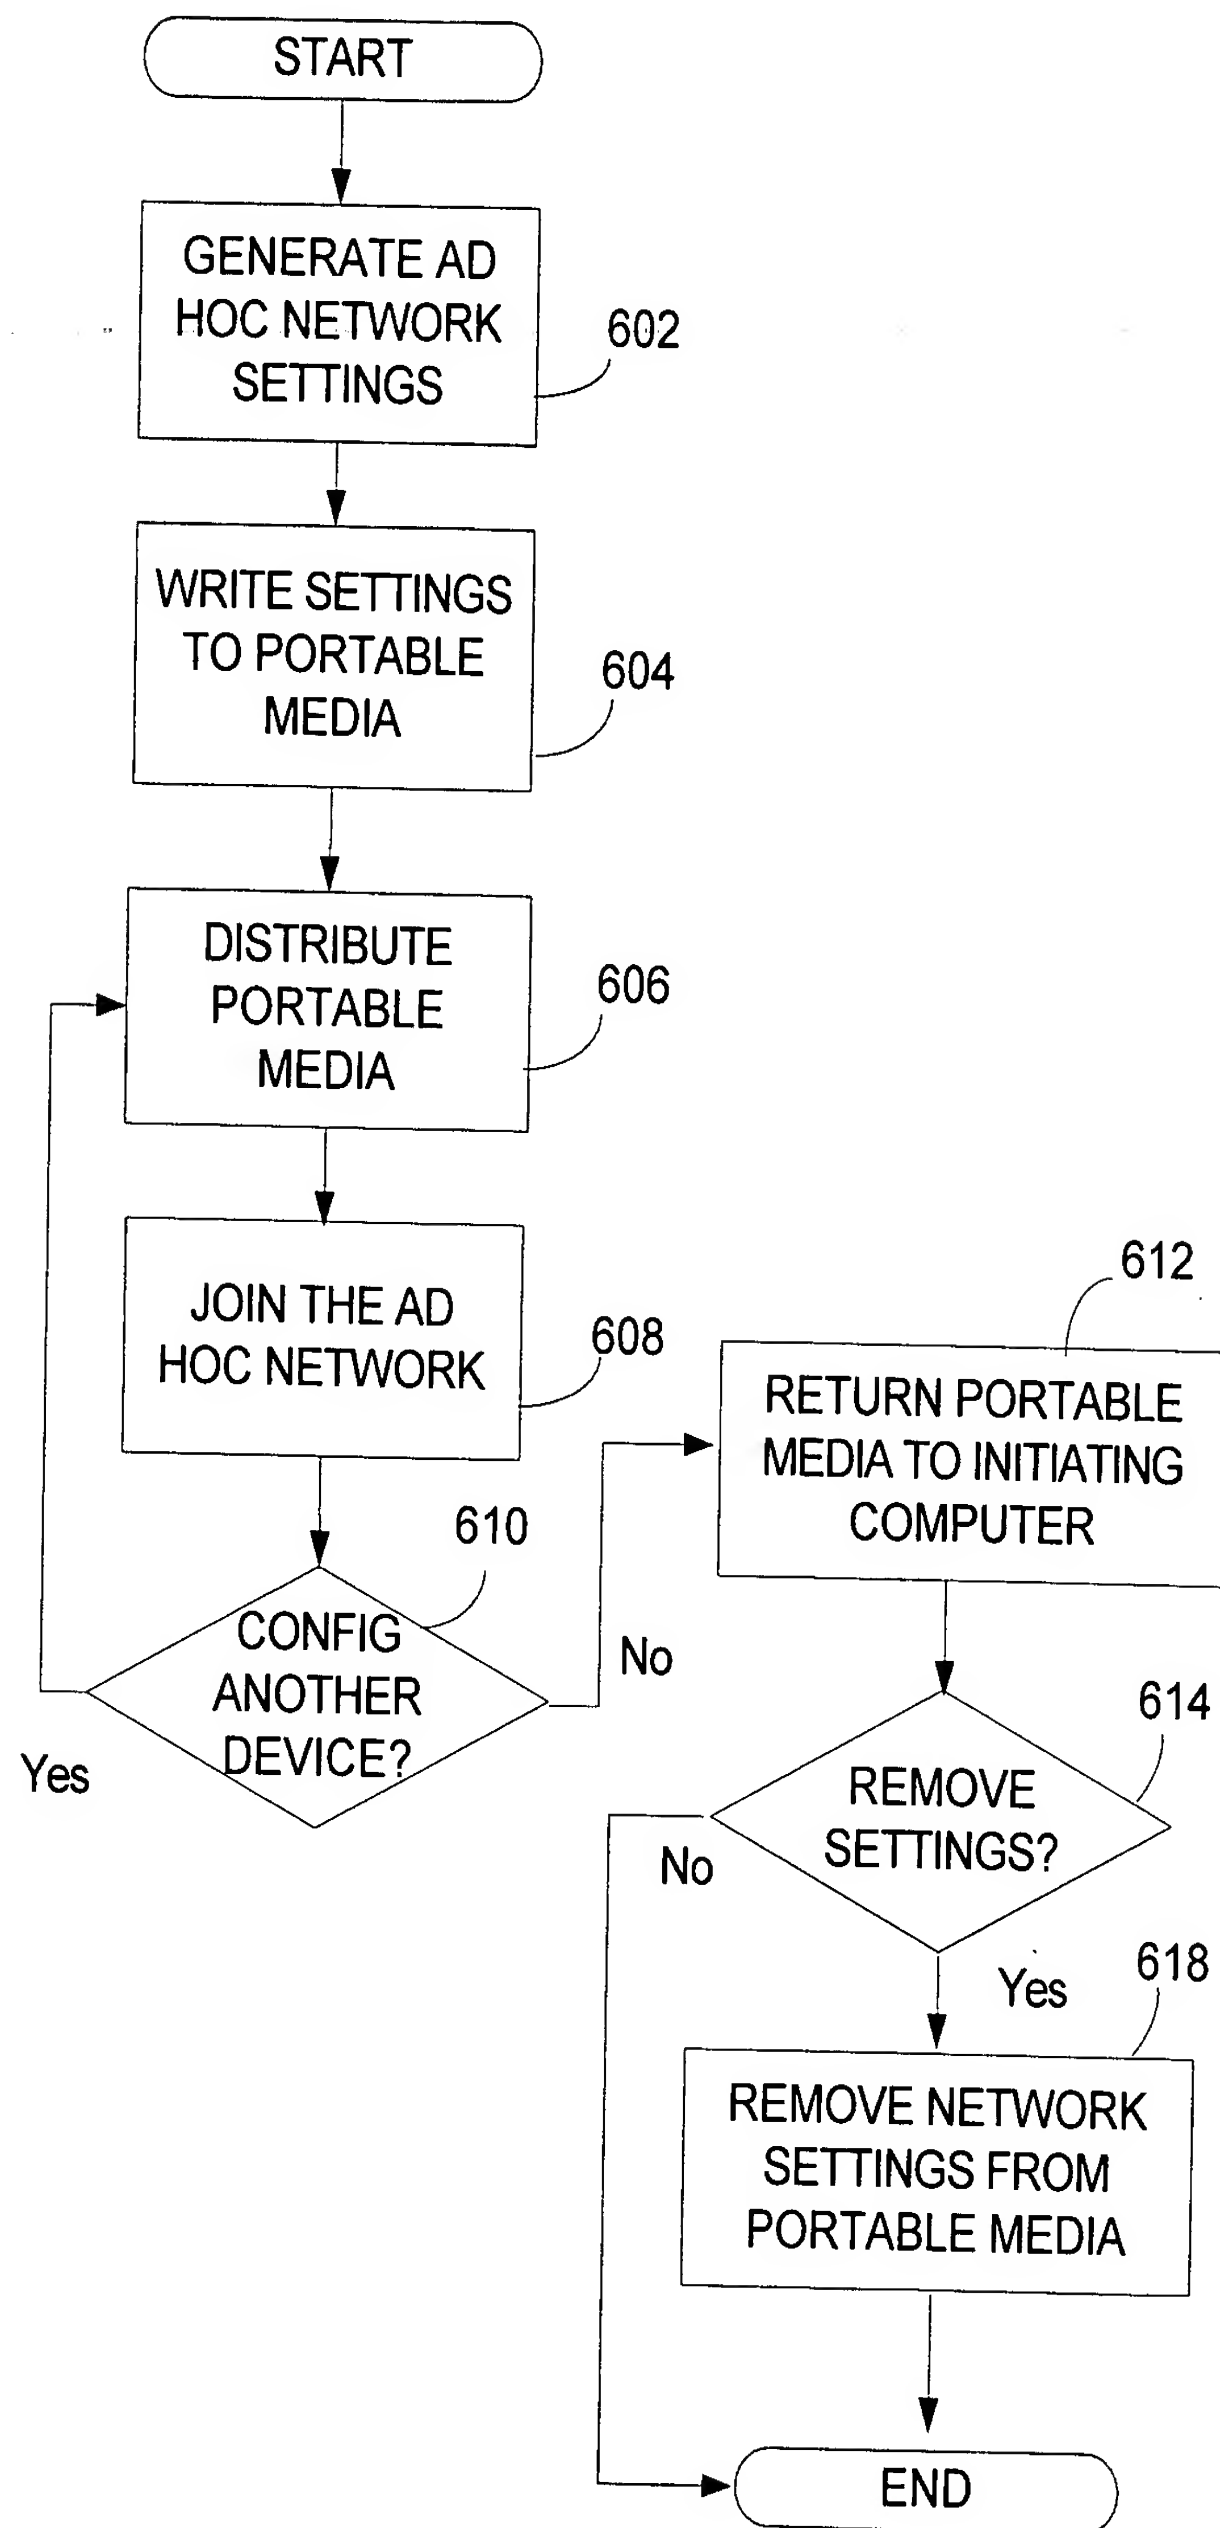


FIG. 6



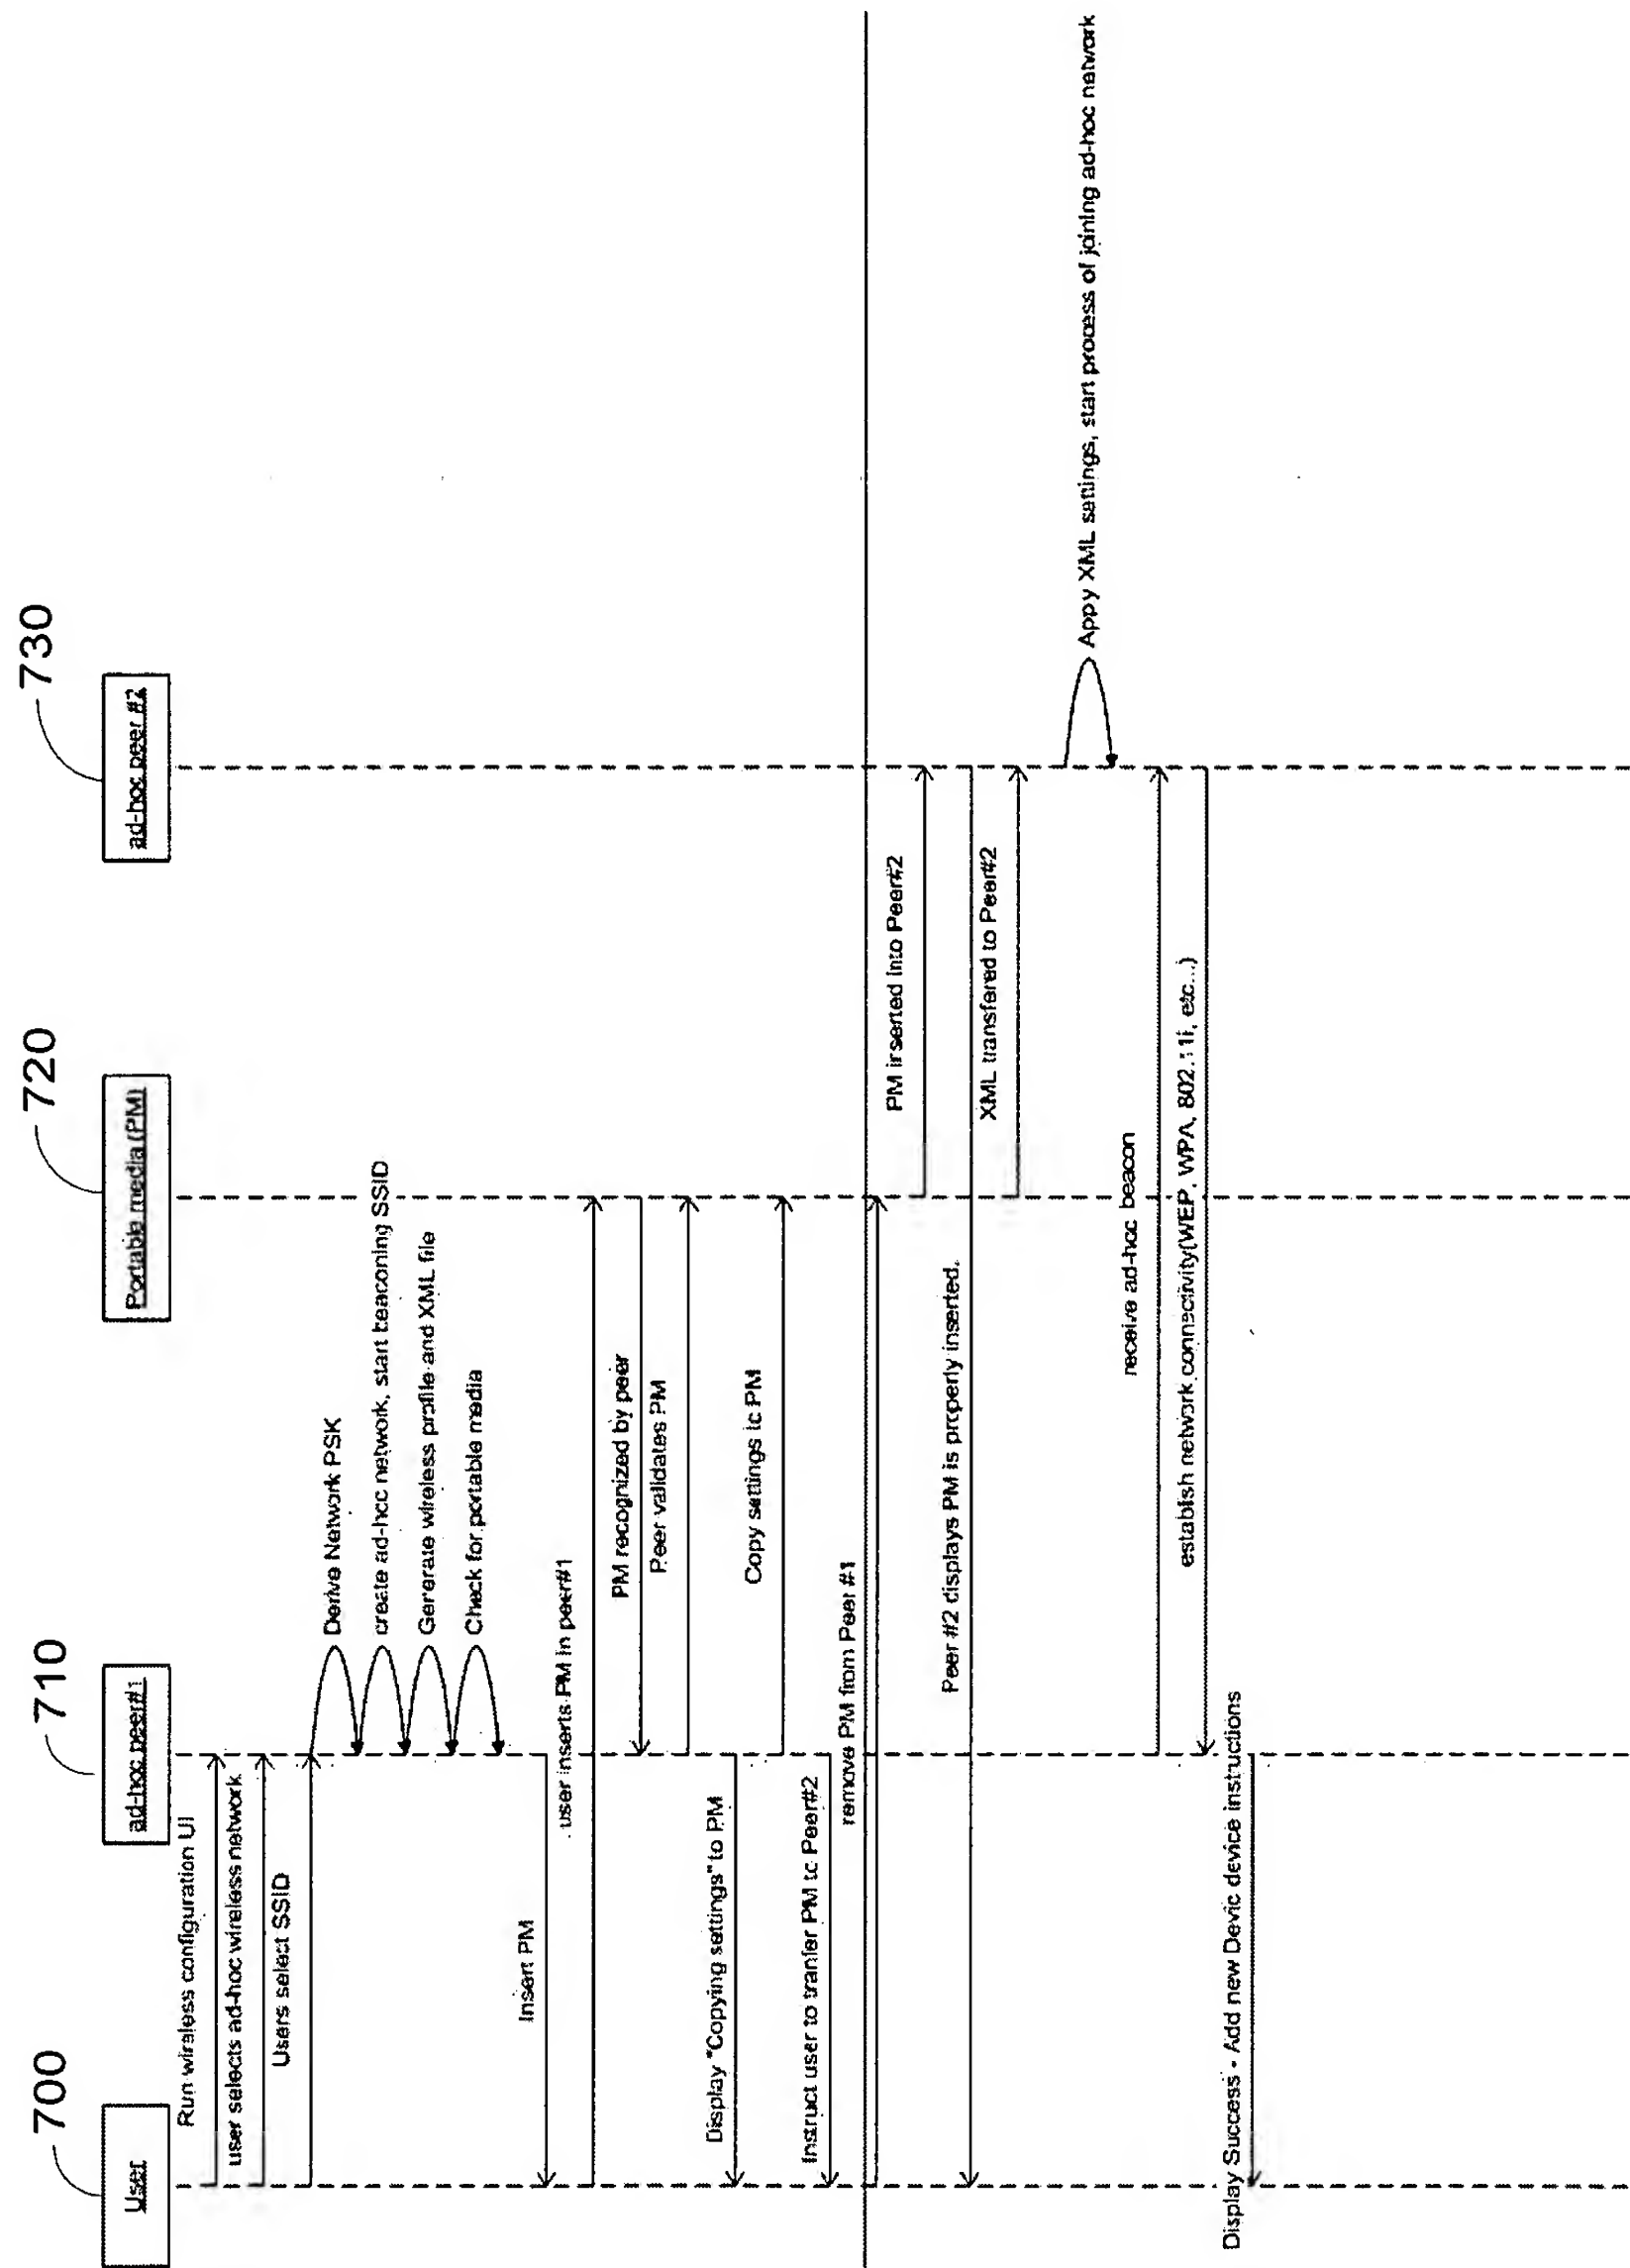


FIG. 7

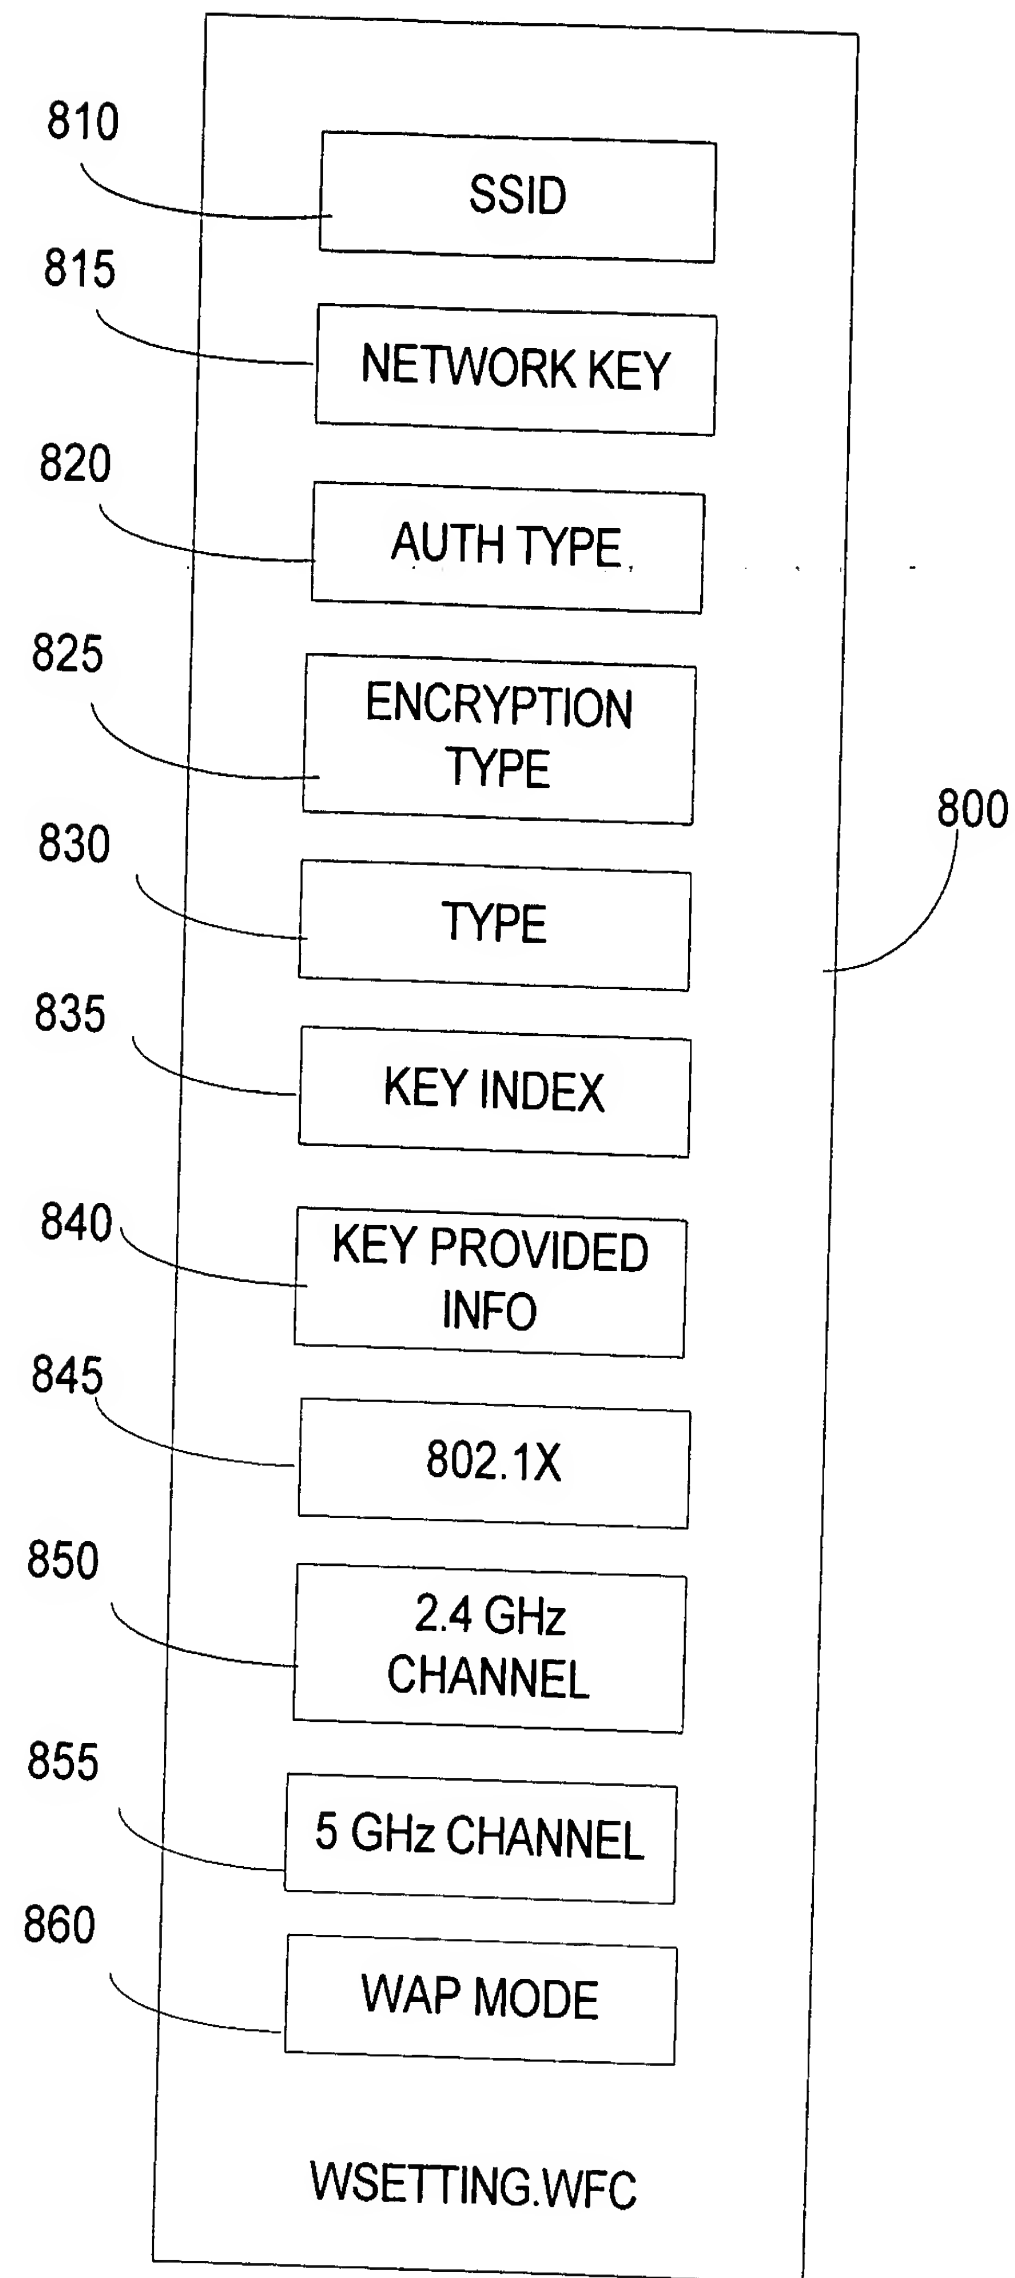


FIG. 8